



Simply Wood

— finest quality —



Coronation Bench Assembly Instructions

Coronation Pack List




A – Seat Assembly x 1
B – Backrest Assembly x 1
C – Right Leg Assembly x 1
D – Left Leg Assembly x 1

Fixings

90mm Bolt x 8
100mm Bolt x 2
Washer x 10
13mm Hex Nut x 10

Tools required (not Supplied)

13mm Spanner
Hammer

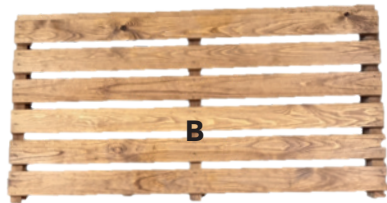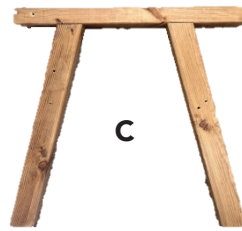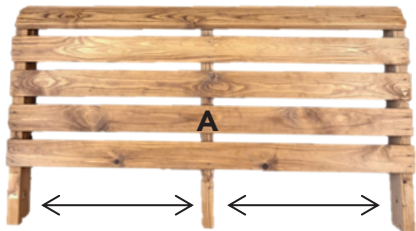

1. Position backrest assembly B onto the backrest supports on seat assembly A shown with arrows.
2. Take right leg assembly C and line up 2 pre drilled holes with pre drilled holes on seat assembly A at the front. Insert 2 x 90mm bolt to keep in position.
3. Insert 1 x 100mm bolt through the pre drilled hole in armrest of right leg assembly C into backrest assembly B
4. Insert 2 x 90mm bolt through back leg of leg assembly C into backrest assembly B.
5. Secure all bolts using 13mm spanner with a washer and 13mm hex nut on each. Be aware not to over tighten.
6. Repeat steps 2 to 5 for the other side, using leg assembly D.

Free Helpline: 0800 118 5141 • info@wooden-garden-furniture.com
www.wooden-garden-furniture.com